



Flue Section

scale 1:10

note:

- The **External Vertical Powerflue** should be used in situations where there is no space to access the Powerflue Fan - the EVP has the fan inside the cowl where it is readily accessible for servicing.
- Should the flue not extend past the apex, the top of the flue should extend at least 400mm from the roof - 500mm in heavy snow regions.
- **Universal Vertical Powerflue Install Manual** is available for the assembly of this flue system.

IMPORTANT:

This technical sheet must be read in conjunction with the requisite Escea D-Series Gas Fire Installation Manual, the latest version can be found on our website www.escea.com/nz/technical/

Contact the **ESCEA Architectural Advisory Team** for assistance with installation of this fire - aa@escea.com

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

file: D-Series FLUE Master File.dwg	scale: as shown	ecn: ECN-2377	drawing no: EDA-0195	revision: V.02	date: 12.12.2017	drawn: MG
--	--------------------	------------------	-------------------------	-------------------	---------------------	--------------