 


#### 19.10 Teaching the radio frequency code of the Remote Control to the ST900 fire:

The handheld remote controller uses a radio frequency receiver and must learn the unique address of the matching fireplace control unit. The ST900 comes with a remote that has already been "matched" with the fireplace, so this must be done only if either the fireplace control unit or the remote controller has been damaged and replaced.

In order to do this, you must turn the lock/unlock switch on the fireplace control unit box (A) to the UNLOCK position.

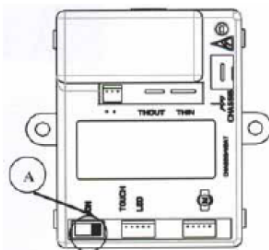

After that, you must push the ON/OFF button (13), and the ON display (5) or the OFF display (6) will start blinking.

When this happens, push at the same time the ON/OFF button (13), the UP button (12) and the DOWN button (15).

 
At that time nothing appears to happen, then you must push the SET button (14) once. The clock display (8) will appear in the remote control. This means that the remote has sent the instructions to the unit control.

The clock display (8) will disappear in a few seconds automatically. To finish the learning procedure, turn the switch on the control unit (A) to the LOCK position.

#### 19.10 Teaching the radio frequency code of the Remote Control to the ST900 fire:

The handheld remote controller uses a radio frequency receiver and must learn the unique address of the matching fireplace control unit. The ST900 comes with a remote that has already been "matched" with the fireplace, so this must be done only if either the fireplace control unit or the remote controller has been damaged and replaced.

In order to do this, you must turn the lock/unlock switch on the fireplace control unit box (A) to the UNLOCK position.

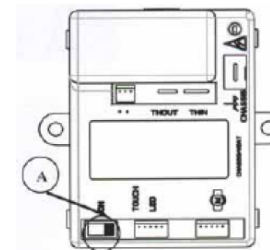

After that, you must push the ON/OFF button (13), and the ON display (5) or the OFF display (6) will start blinking.

When this happens, push at the same time the ON/OFF button (13), the UP button (12) and the DOWN button (15).


At that time nothing appears to happen, then you must push the SET button (14) once. The clock display (8) will appear in the remote control. This means that the remote has sent the instructions to the unit control.

The clock display (8) will disappear in a few seconds automatically. To finish the learning procedure, turn the switch on the control unit (A) to the LOCK position.

#### 19.10 Teaching the radio frequency code of the Remote Control to the ST900 fire:

 The handheld remote controller uses a radio frequency receiver and must learn the unique address of the matching fireplace control unit. The ST900 comes with a remote that has already been "matched" with the fireplace, so this must be done only if either the fireplace control unit or the remote controller has been damaged and replaced.

In order to do this, you must turn the lock/unlock switch on the fireplace control unit box (A) to the UNLOCK position.

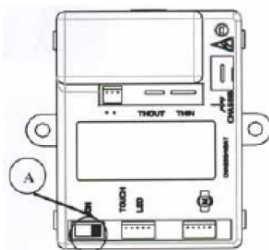

After that, you must push the ON/OFF button (13), and the ON display (5) or the OFF display (6) will start blinking.

When this happens, push at the same time the ON/OFF button (13), the UP button (12) and the DOWN button (15).


At that time nothing appears to happen, then you must push the SET button (14) once. The clock display (8) will appear in the remote control. This means that the remote has sent the instructions to the unit control.

The clock display (8) will disappear in a few seconds automatically. To finish the learning procedure, turn the switch on the control unit (A) to the LOCK position.

#### 19.10 Teaching the radio frequency code of the Remote Control to the ST900 fire:

 The handheld remote controller uses a radio frequency receiver and must learn the unique address of the matching fireplace control unit. The ST900 comes with a remote that has already been "matched" with the fireplace, so this must be done only if either the fireplace control unit or the remote controller has been damaged and replaced.

In order to do this, you must turn the lock/unlock switch on the fireplace control unit box (A) to the UNLOCK position.

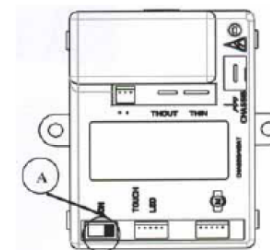

After that, you must push the ON/OFF button (13), and the ON display (5) or the OFF display (6) will start blinking.

When this happens, push at the same time the ON/OFF button (13), the UP button (12) and the DOWN button (15).

At that time nothing appears to happen, then you must push the SET button (14) once. The clock display (8) will appear in the remote control. This means that the remote has sent the instructions to the unit control.

The clock display (8) will disappear in a few seconds automatically. To finish the learning procedure, turn the switch on the control unit (A) to the LOCK position.