

Installing Ceramic Stone Kits

WSK / BSK


Spread the supplied ceramic stones evenly across the firebox base, **ensuring that there is only one layer of stones.** More than one layer of stones will result in reduced flame efficiency.

Make sure the Flame Sensing and Spark Ignition rods are clear of stones to prevent ignition failure.

IB850 ONLY:

If your Ceramic Stone Kit is supplied with an 850 Coals Baffle, fasten it to the firebox base as shown using the supplied screws.

Note: To fix right hand side screw through burner as shown, you will need to drill a 3mm hole through the lower baffle.

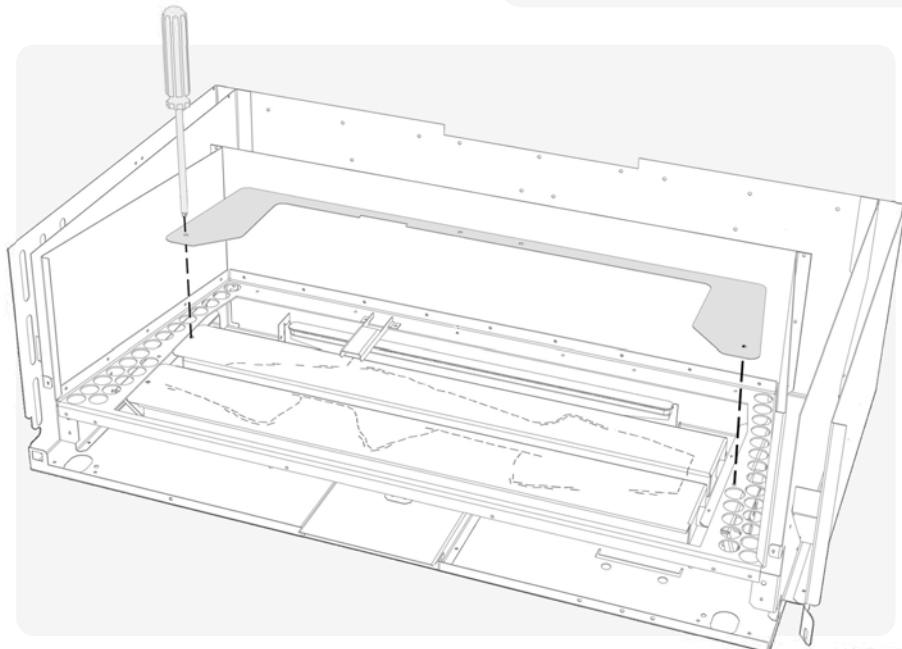

escea.

Installing Ceramic Stone Kits

WSK / BSK


Spread the supplied ceramic stones evenly across the firebox base, **ensuring that there is only one layer of stones.** More than one layer of stones will result in reduced flame efficiency.

Make sure the Flame Sensing and Spark Ignition rods are clear of stones to prevent ignition failure.

IB850 ONLY:

If your Ceramic Stone Kit is supplied with an 850 Coals Baffle, fasten it to the firebox base as shown using the supplied screws.

Note: To fix right hand side screw through burner as shown, you will need to drill a 3mm hole through the lower baffle.

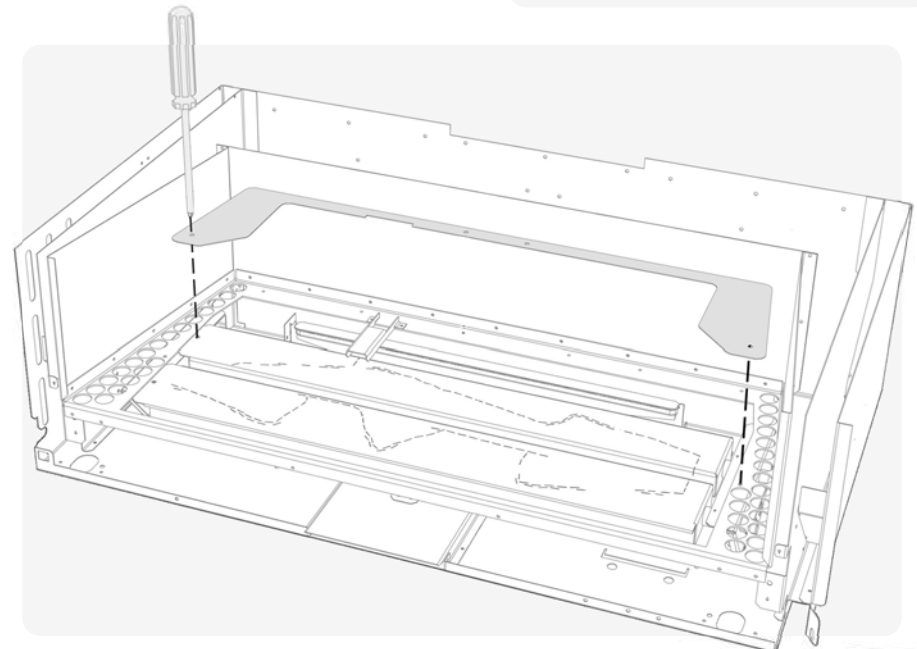

escea.