


## Notes:

- This detail is to assist in the installation of the DF700, DF960 or DF990 Gas Fireplace into a Masonry Cavity.
- Finish detail also applicable to the side of the appliance.
- No flue clearance is required where the fireplace is installed into a fully masonry cavity.
- Standoff rails fixed to the sides of the fireplace can be removed for narrow cavities.
- Powdercoated fascia's can be easily damaged handle with care.
- This technical sheet must be read in conjunction with the Escea DF Series Installation Manual, the latest version can be found on our website at www.escea.com.

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

Contact the ESCEA Architectural Advisory Team for assistance with the specification of this fire - aa@escea.com



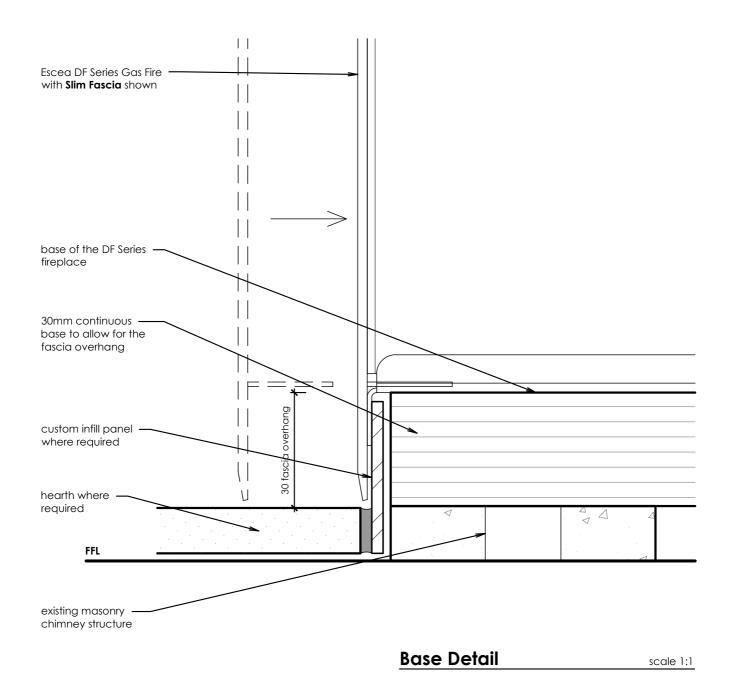

## Notes:

- This detail is to assist in the installation of the DF700, DF960 or DF990 Gas Fireplace into a Masonry Cavity.
- Finish detail also applicable to the side of the appliance.
- No flue clearance is required where the fireplace is installed into a fully masonry cavity.
- Standoff rails fixed to the sides of the fireplace can be removed for narrow cavities.
- Powdercoated fascia's can be easily damaged handle with care.
- Floor mounted installations may require the use of a hearth to protect heat sensitive or combustible floor coverings.
- This technical sheet must be read in conjunction with the Escea DF Series Installation Manual, the latest version can be found on our website at **www.escea.com**.

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

Contact the ESCEA Architectural Advisory Team for assistance with the specification of this fire - aa@escea.com