

**Section Detail**


1:10

**Notes:**

- DO NOT SCALE OFF THESE DRAWINGS. All dimensions are in mm.
- This detail sheet is to assist in the installation of a DF990 Gas Fire with an **Escea Timber Mantel**.
- Combustible materials directly above the fireplace, may be susceptible to high levels of heat (outside compliance with AS/NZS5601) if the above detailing is not adhered to. Ensure DF990 spacer bracket is used.
- Raise the base of the fire up off finished floor level a minimum of 65mm, to allow for the infill panel below the fire.
- This technical sheet must be read in conjunction with the Escea DF Series Installation Manual, the latest version can be found on our website at [www.escea.com](http://www.escea.com).

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

Contact the ESCEA Architectural Advisory Team for assistance with the specification of this fire - [aa@escea.com](mailto:aa@escea.com)

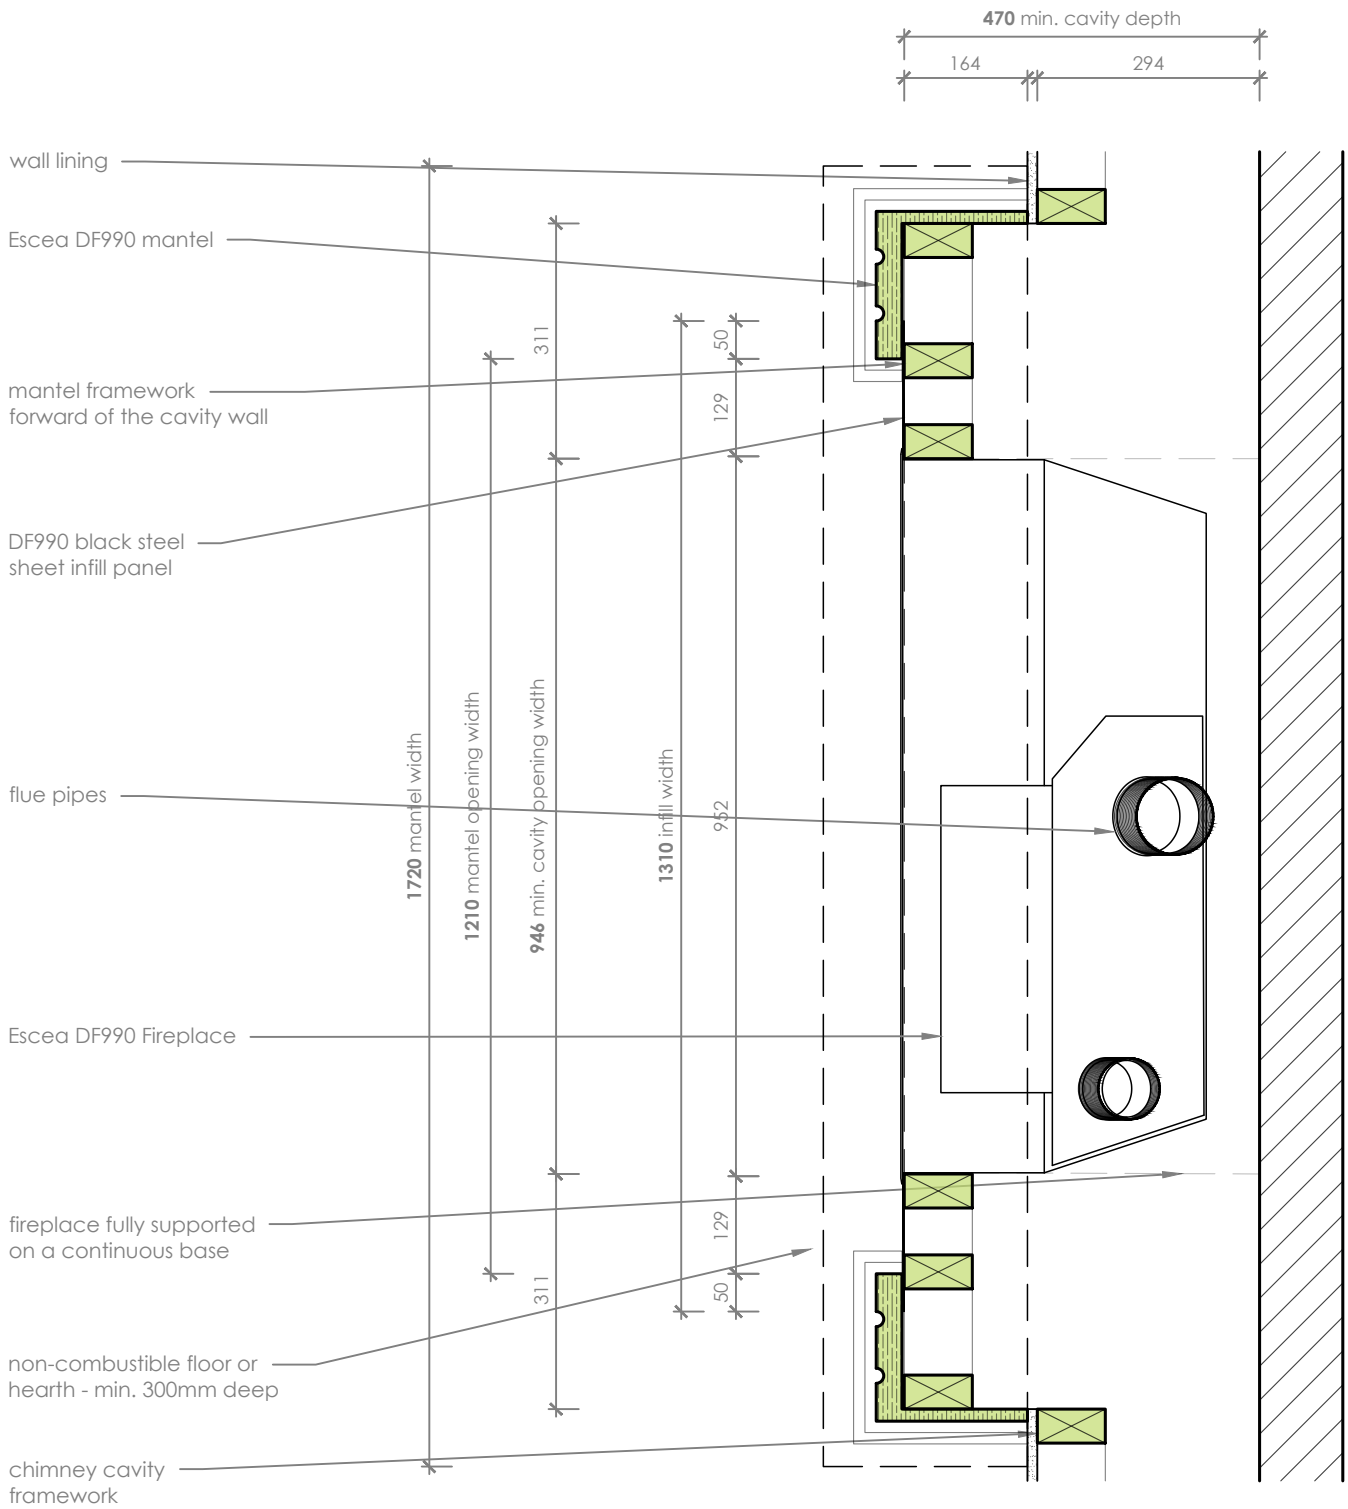

**Plan Detail**

1:10

**Notes:**

- DO NOT SCALE OFF THESE DRAWINGS. All dimensions are in mm.
- This detail sheet is to assist in the installation of a DF990 Gas Fire with an **Escea Timber Mantel**.
- Combustible materials directly above the fireplace, may be susceptible to high levels of heat (outside compliance with AS/NZS5601) if the above detailing is not adhered to. Ensure DF990 spacer bracket is used.
- Raise the base of the fire up off finished floor level a minimum of 65mm, to allow for the infill panel below the fire.
- This technical sheet must be read in conjunction with the Escea DF Series Installation Manual, the latest version can be found on our website at [www.escea.com](http://www.escea.com).

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

Contact the **ESCEA Architectural Advisory Team** for assistance with the specification of this fire - [aa@escea.com](mailto:aa@escea.com)