


Prolonged unprotected exposure to heat may be detrimental to the appearance or long term performance of the cladding. The DS Series Extended Trim Kit is to protect the exposed edges from the direct heat from the fire.

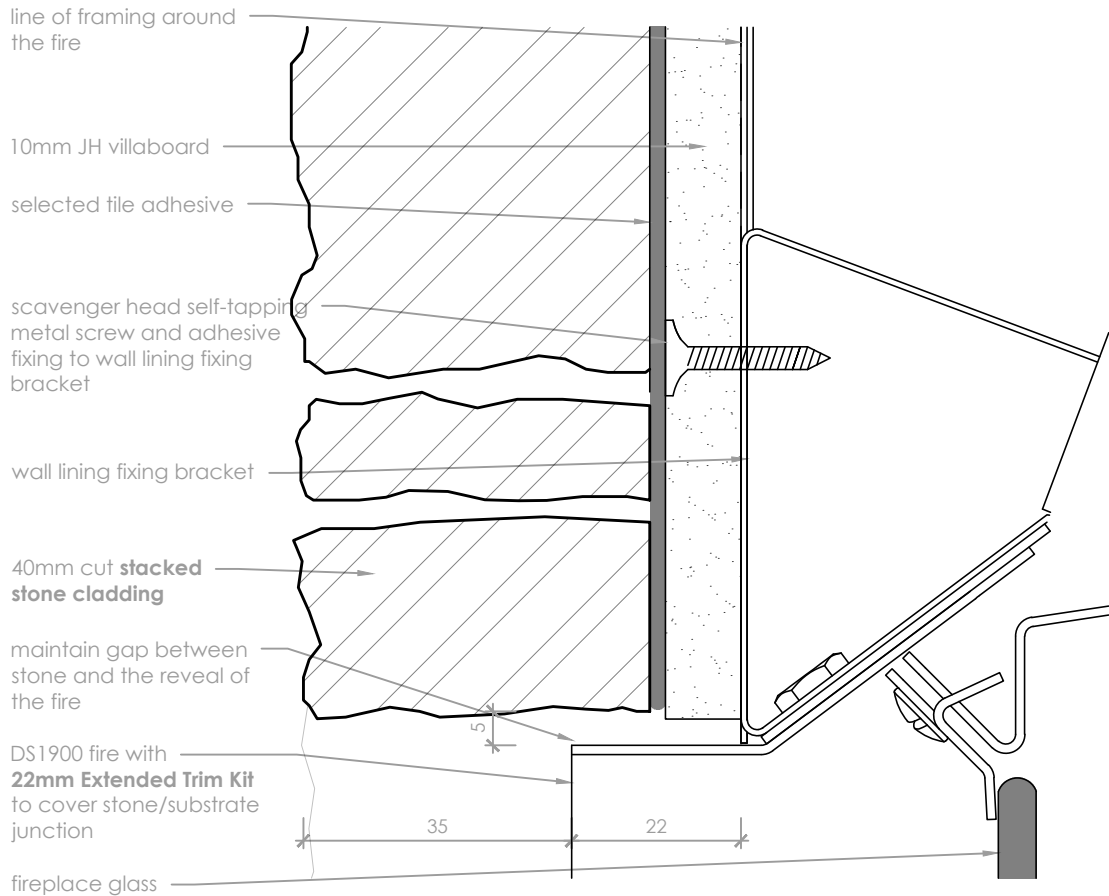

**Stacked Stone Detail**

scale 1:1

This detail is applicable for:  
**DS1900**

**Notes:**

- DO NOT SCALE OFF THESE DRAWINGS
- All dimensions are in mm.
- This detail is to assist in the installation of a **frameless finish** to the DS1900 Gas Fire.
- Escea recommends when using these finishing methods that a **10mm substrate** is used.
- Use care when sanding plaster or cleaning mortar to avoid scratching black fireplace reveals - use a damp sponge to remove excess.
- Black fireplace reveals must be able to be removed - ensure any adhesive or compound is kept clear.
- First course above fire must have a good bond to the substrate.
- This technical sheet must be read in conjunction with the Escea DS Series Installation Manual, the latest version can be found on our website at [www.escea.com](http://www.escea.com).

GENERAL CONSTRUCTION AND FINISHES SHOWN INDICATIVE ONLY

Contact the ESCEA Architectural Advisory Team for assistance with the specification of this fire - [aa@escea.com](mailto:aa@escea.com)