
IB600 Gas Fire

Information sheet for builders and architects.

Creating the Cavity:

The dimensioned drawings below show the product dimensions and minimum size of the opening that must be created. The wall board that lines the outside of this opening can be normal dry wall (Gib Board) and does not need to be non-combustible. The flue and Zero Clearance Kit (ZCK) are installed first with power and gas services in place so that the fire itself can be installed guickly and easily once the room, into which it is installed, is complete. I.e. walls finished (painted/papered) and floor coverings in place.

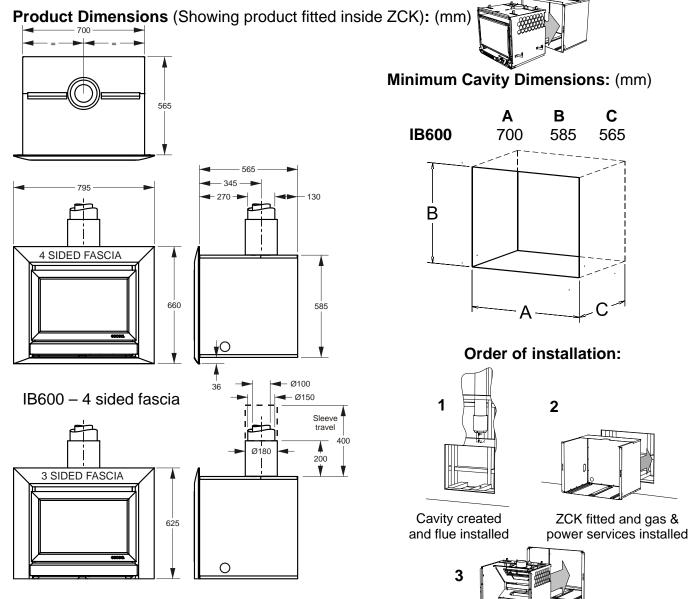

IB600 – 3 sided fascia

Gas Specifications:

Heat output	= 7.5kW
Gas Input	= 36MJ/h
Gas Connection	= Front RH corner of heater
Electrical Connection	= 240V 3 Pin plug within 1.2m
	of the rear LH corner of heater

G8864_5 IB600 info sheet for builders and architects.doc

esceo.

After the room/dwelling is complete finally install and commission the gas fireplace.

Flueing the heater:

This heater is to be conventionally flued with a 100mm dia flue system, in accordance with the requirements of NZS 5261 / AS5601 / AG601-2000. A power flue system is also available, please ask your agent, or visit our web site for details on this.




Ventilation:


It is **important to remember** that Clause G4.2.0 of the New Zealand Building Code and Section 2.6.6 of the New Zealand Gas Installation Standard calls for additional ventilation into living spaces where open flued natural draught appliances are installed.


Both of these codes provide formulae and tables for calculating the required ventilation given the size of the living space and the gas input of the appliance.

The following are the recommended minimum clearances for the location of any electrical equipment (such as Plasma TV, LCD TV or home theatre) above an escea gas fire. Use either (1) a shelf or mantle below your TV screen or alternatively you can construct (2) a recess to mount you TV screen into.

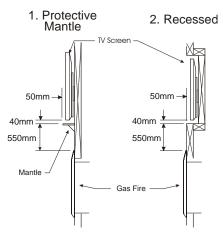

When building a recess the flueing must be considered. Shown right is the minimum distances possible when offsetting the flue to allow for a recess above.

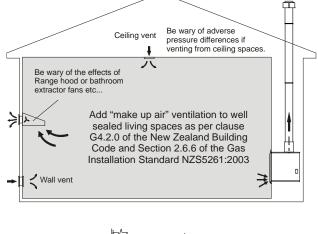

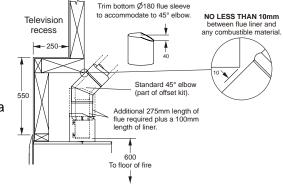

Floor of cavity:

The base of the product must be fully supported at either side and at the centre front to back.


Hearth:

If this fire is being installed at floor level a hearth made from non-combustible material must extend *no less than 300mm from the front of the fire*. This hearth should be at least as wide at the fire's outer fascia and no less than 10mm thick. The floor in front of this hearth will still get warm so if floor covering is vinyl, nylon carpet or other heat sensitive material then we recommend extending the hearth to 450mm in depth.

If you plan to cover the hearth with a veneer such as tiles remember to keep the base of the zero clearance kit level with the top of the hearth covering.

Raising the fire up a wall:

If the fire is being located where its base is any more than **100mm** up off the ground, no hearth is required. Escea recommend using our four sided fascia. (Available from your Escea dealer).

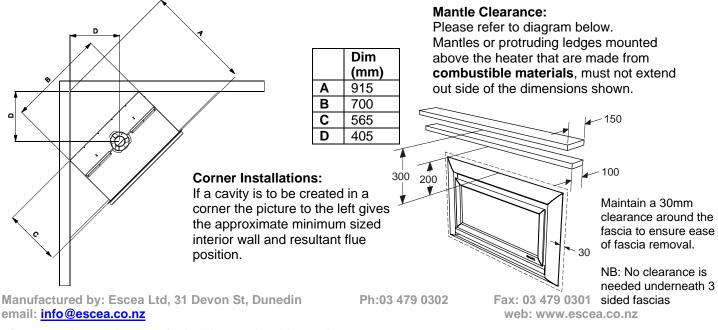

G8864_5 IB600 info sheet for builders and architects.doc